

ACCESS™ SERIES


Assembly Instructions

PACKAGE INCLUDES:

Frame assembly, tent body, rainfly, stakes


1 PREPARE FOR SETUP

1. Stake out four corners tightly.

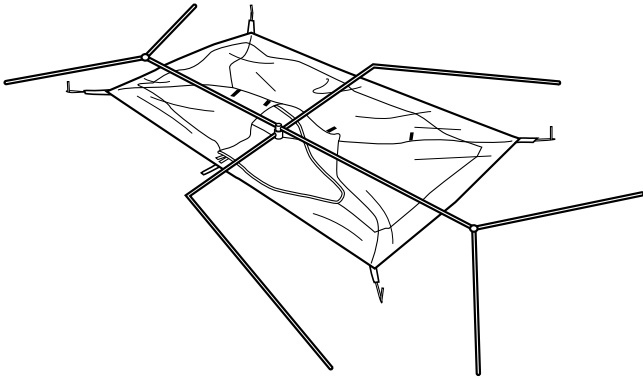


2 ASSEMBLE TENT FRAME

1. Insert pole tips of main frame into floor grommets.
2. Attach clips to tent pole.

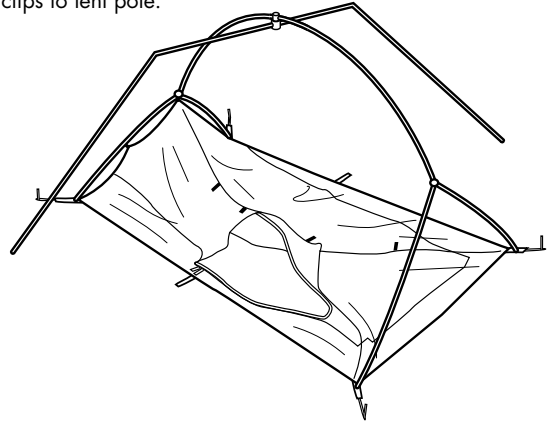

3 SETUP VESTIBULE

1. Place cross pole under main frame and insert pole tips into mid grommets.
2. Attach clips to tent pole.
3. Place clip below red washer.

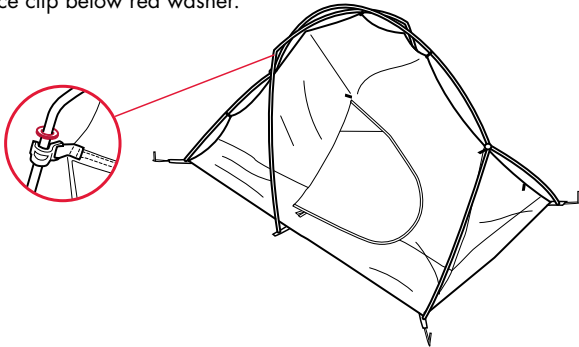

4 STAKE VESTIBULE

1. Lay rainfly over tent, aligning seams to frame. Insert pole tips into rainfly grommets.
2. Stretch out vestibules till taut, stake down.



USE TIPS: All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof.